




# Disassembling Breville BKC600XL Coffee Brewer Head

This guide explains how to disassemble the Breville BKC600XL coffee brewer head.

Written By: Antonio

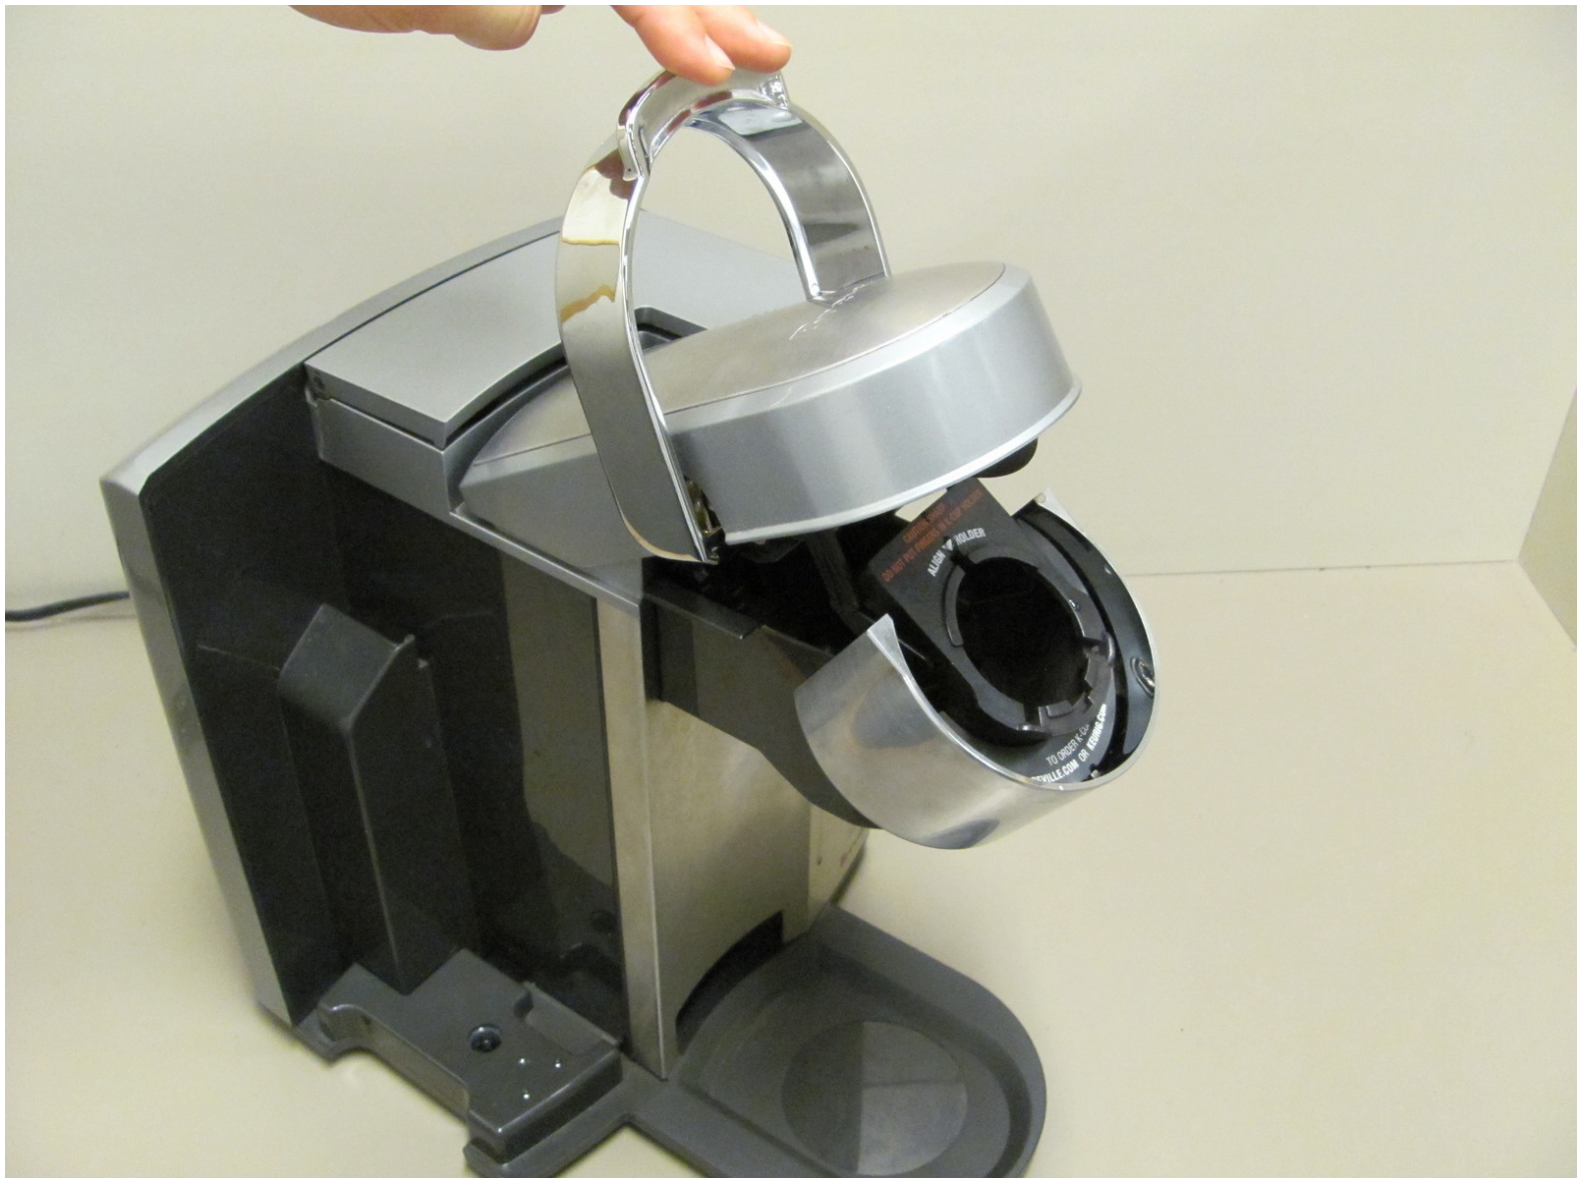

## INTRODUCTION


This guide explains how to disassemble the Breville BKC600XL coffee brewer head.

---

### TOOLS:


- [1.5mm Hex Screwdriver](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — "Bottom" Black Shell Piece

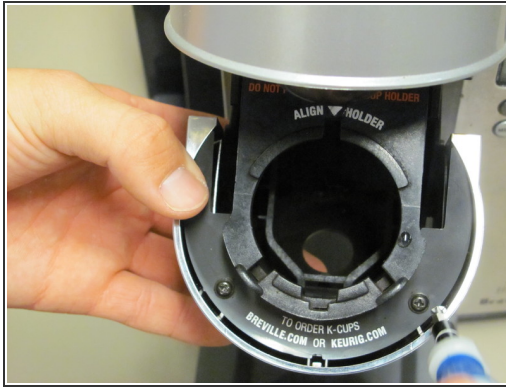

- Remove the following 2 screws:
  - Two 12mm black Truss Phillips screws.
- ☑ Reminder for reassembly; This bottom piece is first to be screwed back on.




## Step 2 — "Top" Black Shell Piece

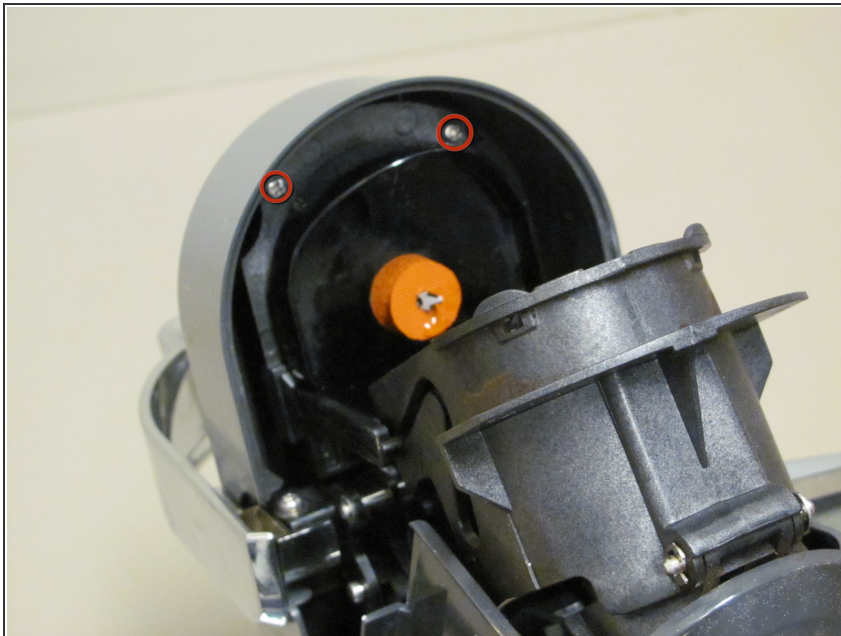

- Remove the two 12mm Phillips screws.



## Step 3 — Silver Casing

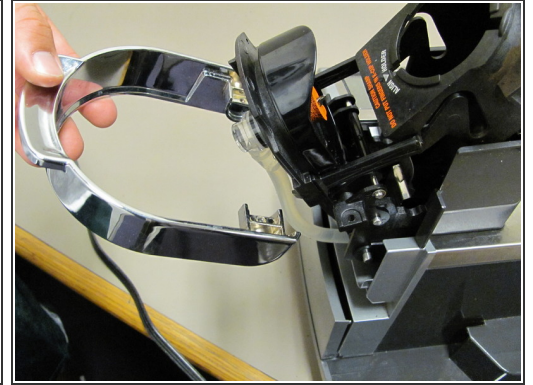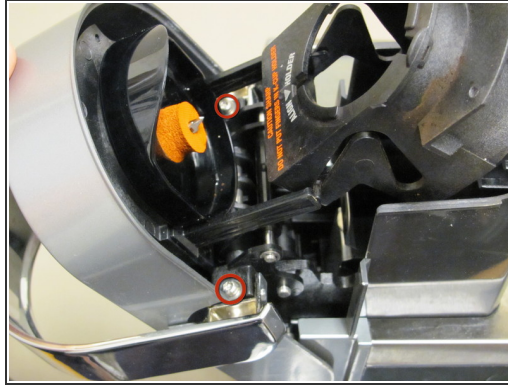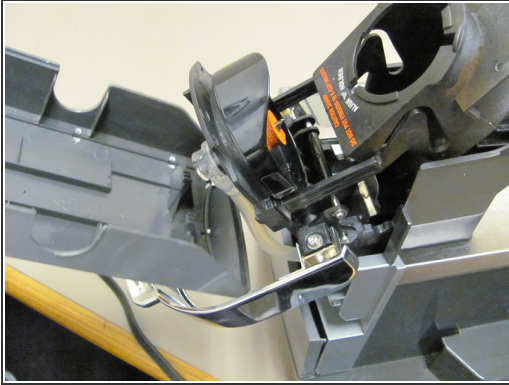

- Remove the grey plastic casing.
- Remove the two 12mm hexagonal screws.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 11:33:21 PM.